

Absolute Encoder GDS60---LB User Manual

- A "photoelectric detection mode", with excellent impact and vibration resistance.
- Programmable, intelligent absolute value encoder; professional setting software, convenient for user operation.
- Wide operating voltage, low current consumption.
- Clamping flange, servo flange or blind hollow shaft, the international standard structure.
- External resetting line to set the default location, easy installation, no need to find ZERO.

★Please totally read the following instruction first for proper use of encoder.

Mechanical spec.		Electrical spec.	
Max. speed	6000 RPM	Power supply	10-30Vdc (5Vdc optional)
Shaft load	Axial 40N, radial 100N	Current consumption	< 50mA (24Vdc)no-load
impact	1000m/s ² (6ms), about 100g	output	18-bit RS485 free communication protocol and 4-20mA output
Anti-vibration	200m/s ² (10-2000Hz) about 20g	resolution	1/262144FS
Allow axial jump	±1.5mm	IP	IP65 或 IP68
Allow radial jump	±0.2mm	accuracy	0.01°
structure	60mm outer diameter, solid shaft, or hollow shaft	Operating temp.	-40℃~100℃
Connection Type	6-core shielded cable or aviation connector	Storage temp.	-40℃~85℃

Connection

signal	Vcc	GND	RS485 A	RS485 B	4-20mA+	4-20mA-	Reset	Permit
Color	Brown	white	Green	Yellow	Pink	Black	Gray	Blue

Note: 1. How to use Programming-permit-line (Blue)

When setting the mode: the blue wire of the encoder and the brown wire are connected to the positive power+ together. At this time, the communication rate of the encoder is fixed at 19200bps.


Non-setting mode: In normal operation, it is recommended to connect the blue wire and the white wire together to the power ground.

2. How to use reset line (gray)

When the reset line (gray) connected to power+ for more than 1 second, the current data of the encoder becomes the reset value (the reset value of the encoder can be set arbitrarily)


The encoder can also be set by using the instruction (for specific instructions, refer instance 2)

Example (output signal evolution)

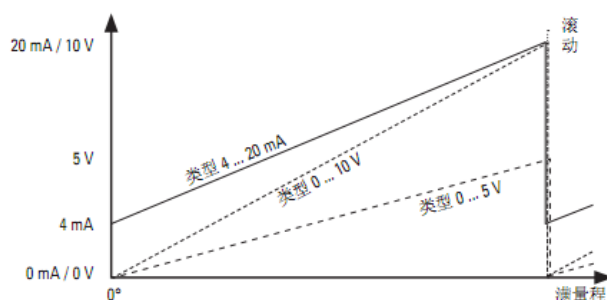


Installation dimensions (Unit: mm)


a. Clamping & synchro flange(default)

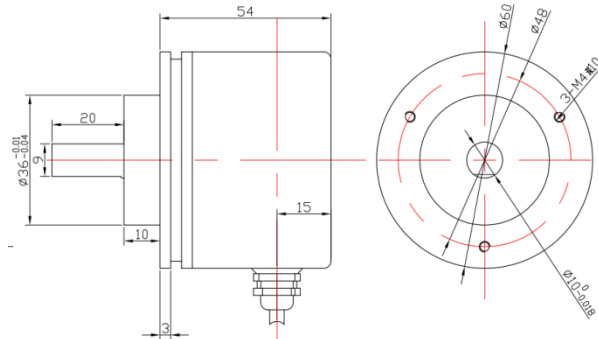

b. synchro flange

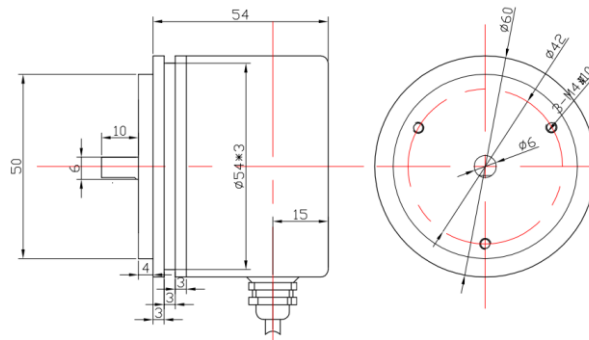

c. Hollow shaft

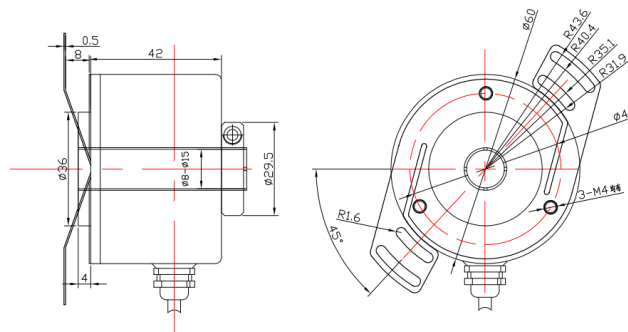

Custom RS485 communication protocol description:

Baud Rate: 4800bps 9600bps 19200bps 38400bps 115200bps.

Frame format: 8 data bits, 1 stop bit, no parity, no flow control.

The parameter of encoders is set by software instruction.

When the encoder is in active mode, That is the encoder automatically sends data to the host. Data length is 16 hexadecimal ASCII code format is: XAB> ± DATA ✓, as follow:

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
X	address	>	±	DATA											✓

Wherein, "X" is the leading letters, ">" is delimiters, "±" is the sign bit; "DATA" is the data, ASCII format, 10,



from 0 to 9 constitute the range of -9,999,999,999 ~ +9,999,999,999. “↵” is carriage return (0D).

When the encoder is in passive mode, That is quiz mode. Host send inquiry instruction to the encoder, the instruction is four hexadecimal ASCII code format is: D + AB ↵.

“AB” is encoder address, range is 0~99.

Instance:

1: Read data:

Host send: D + address + 0D

Encoder reply: X + address +> + match bit + data bit + 0D

Example:

Host send: 44 30 31 0D (when the encoder address is 01)

Encoder back: 58 30 31 3E 2B 30 30 30 30 30 30 31 32 33 0D

2: Encoder reset command:

Host send: D + address + L + M + sum check + 0D

Encoder reply: X + address + l + m + sum check + 0D

Example:

Host send: 44 30 31 4C 4D sum check 0D (when the encoder address is 01)

Encoder reply: 58 30 31 6C 4D sum check 0D (reset current position)

Note:

Sum check: The sum of all the previous data, take the lower two digits as the check value

For encoder parameter setting (ex. 4-20mA corresponding value), please use our company's special CALT software.

Operate instructions:

1. Data direction

Clockwise: Encoder data increases when the encoder rotates clockwise facing the encoder shaft.

Counterclockwise: Encoder data increases when the encoder rotates counterclockwise facing the encoder shaft.

2. Master/slave mode:

Master mode is broadcast

Slave mode is question and answer mode

3. Baud rate:

Setting range: 4800 ---- 115200

4. Resolution: The data output by the encoder in one revolution

1--4096 can be set

5. Encoder address:

Setting range: 0--99

6. Reset value:

a. When the reset line (gray) connected to power+ for more than 1 second, the current value of the encoder becomes the reset value.

b. When sending a reset command to the encoder, the current value of the encoder becomes the reset value.
(Instance 2)

7. Set the min. analog value:

Must be less than the maximum analog value, generally set to 0

8. Set the max. analog value:

Must be less than or equal to the encoder resolution (depending on the actual situation)

9. Minimum / maximum analog calibration:

These two parameters have been calibrated before leaving the factory, and generally do not need to be used. If the minimum or maximum analog value is inaccurate, please increase the number accordingly and click to confirm.

Read parameters:

That is to read the original parameters of the encoder

Save:

Write the currently modified parameters to the encoder.

Export parameters:

Store the parameter that has just been set to the place specified by the computer. In order to import the storage parameters directly in the future.

Import parameters:

Import the previously exported parameters into the software and use them.

RS485 communication considerations:

1. Communication speed and transmission distance is a contradiction. The higher the rate, the transmission distance is shorter, but more stable, and vice versa.
2. External reset line (gray wire) used to reset the encoder current position to presetting value. When using, the gray wire should connected to high level (24V). But after the completion of the operation, It's better to connect gray wire to power ground to avoid interference.
3. In the strong external electromagnetic interference, RS485 connection is best to use double-shielded cable.
4. When multiple encoders connect host, because of the encoder have no parity, it is suggested that when the PC programming in time to distinguish between the various encoder data returned.
5. When the system has a motor, encoder power supply should be isolated from other.

Since RS485 circuit is a differential form, A, B are two signal lines with voltage, often times connect to ground or high level, RS485 circuit will cause damage

Shanghai QIYI Electrical & Mechanical Equipment Co., Ltd